

DMX CHANNELS/VALUES/FUNCTIONS

Channel Modes						Value	Function
1Ch	3Ch	4Ch	6Ch	9Ch	10Ch		
1	1	1	1	1	1	0-255	Head 1: 0~100%
1	1	1	2	2	2	0-255	Head 2: 0~100%
1	1	1	3	3	3	0-255	Head 3: 0~100%
1	1	1	4	4	4	0-255	Head 4: 0~100%
1	1	1	5	5	5	0-255	Head 5: 0~100%
1	1	1	6	6	6	0-255	Head 6: 0~100%
		2		7	7	0-31 32-63 64-95 96-127 128-159 160-191 192-223 224-255	Shutter and Strobe Effect LEDs Off LEDs On Strobe effect slow to fast LEDs On Pulse effect in sequences LEDs On Random strobe effect slow to fast LEDs On
	2	3		8	8	0-255	Dimmer (intensity) Intensity 0 to 100%
	3	4		9	9	0-255	Dimmer Fine 16-bit
					10	0-20 21-40 41-60 61-80 81-100 101-120 121-255	Dim Mode Standard Stage TV Architectural Theatre Stage 2 Default to Unit Setting

DMX CHANNELS/VALUES/FUNCTIONS

Channel Mode 10Ch	Value	Function
1	0-255	Head 1: 0~100%
2	0-255	Head 2: 0~100%
3	0-255	Head 3: 0~100%
4	0-255	Head 4: 0~100%
5	0-255	Head 5: 0~100%
6	0-255	Head 6: 0~100%
7	0-31 32-63 64-95 96-127 128-159 160-191 192-223 224-255	Shutter and Strobe Effect LEDs Off LEDs On Strobe effect slow to fast LEDs On Pulse-effect in sequences LEDs On Random strobe effect slow to fast LEDs On
8	0-255	Dimmer (intensity) Intensity 0 to 100%
9	0-255	Dimmer Fine 16-bit
10	0-20 21-40 41-60 61-80 81-100 101-120 121-255	Dim Mode Standard Stage TV Architectural Theatre Stage 2 Default to Unit Setting

DMX CHANNELS/VALUES/FUNCTIONS

Channel Mode 12Ch	Value	Function
1	0-255	Head 1: 0~100%
2	0-255	Head 1 Fine 16-bit
3	0-255	Head 2: 0~100%
4	0-255	Head 2 Fine 16-bit
5	0-255	Head 3: 0~100%
6	0-255	Head 3 Fine 16-bit
7	0-255	Head 4: 0~100%
8	0-255	Head 4 Fine 16-bit
9	0-255	Head 5: 0~100%
10	0-255	Head 5 Fine 16-bit
11	0-255	Head 6: 0~100%
12	0-255	Head 6 Fine 16-bit

DMX CHANNELS/VALUES/FUNCTIONS

Channel Mode 13Ch	Value	Function
1	0-255	Head 1: 0~100%
2	0-255	Head 2: 0~100%
3	0-255	Head 3: 0~100%
4	0-255	Head 4: 0~100%
5	0-255	Head 5: 0~100%
6	0-255	Head 6: 0~100%
7	0-31	Shutter and Strobe Effect LEDs Off
	32-63	LEDs On
	64-95	Strobe effect slow to fast
	96-127	LEDs On
	128-159	Pulse-effect in sequences
	160-191	LEDs On
	192-223	Random strobe effect slow to fast
224-255	LEDs On	
8	0-255	Dimmer (intensity) Intensity 0 to 100%
9	0-255	Dimmer Fine 16-bit

Channel Mode 13Ch	Value	Function
10	0	Auto programs: Off
	1~20	Auto Program 1
	21~40	Auto Program 2
	41~60	Auto Program 3
	61~80	Auto Program 4
	81~100	Auto Program 5
	101~120	Auto Program 6
	121~140	Auto Program 7
	141~160	Auto Program 8
	161~180	Auto Program 9
	181~200	Auto Program 10
	201~220	Auto Program 11
	221~240	Auto Program 12
241~250	Auto Program 13	
251~255	Nothing	
11	0-255	Auto Program Speed: Slow to Fast speed
12	0-255	Auto Programs Fade: Less to More
13	0-20	Dim Mode Standard
	21-40	Stage
	41-60	TV
	61-80	Architectural
	81-100	Theatre
	101-120	Stage 2
121-255	Default to Unit Setting	