

6CH	7CH	8CH	12CH		
1	1	1	1	0-255	<b>Red</b> 0~100%
2	2	2	2	0-255	<b>Green</b> 0~100%
3	3	3	3	0-255	<b>Blue</b> 0~100%
4	4	4	4	0-255	<b>White</b> 0~100%
5	5	5	5	0-255	<b>Amber</b> 0~100%
6	6	6	6	0-255	<b>UV</b> 0~100%
	7	7	7	0-255	<b>Master Dimmer</b> 0 ~100%
		8	8	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	<b>Strobe</b> LED Off LED On Strobe Slow - Fast LED On Strobe Pulse Slow - Fast LED On Random Strobe LED On
			9	0 - 255	<b>Color Macro</b> See pages 12-13 for the Color Macro Chart
			10	0 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 120 121 - 140 141 - 255	<b>Programs</b> No Function 30 Color Change 6 Color Change Color Fade Sound Active 30 Color Change Sound Active 6 Color Change Sound Active 6 Color Fade No Function
			11	0 - 255 0 - 255	<b>Program Speed/Sound Sensitivity</b> Slow - Fast Least Sensitive - Most Sensitive
			12	0 - 20 21-40 41-60 61-80 81-100 101-255	<b>Dimmer Modes</b> Standard Stage TV Architectural Theatre Default to unit setting