

1 CH	2 CH	3 CH	6 CH	VALUES	FUNCTIONS
1	1	1	1	000-255	MASTER DIMMER 0%-100%
	2	2	2	000-255	DIMMER FINE 0%-100%
		3	3		SHUTTER & STROBING
				000-031	LED Off
				032-063	LED On
				064-095	Strobing Slow - Fast
				096-127	LED On
				128-159	Pulse Strobing
				160-191	LED On
				192-223	Random Strobing Slow - Fast
		224-255	LED On		
		4	4		DIMMER MODES
				000-020	Standard
				021-040	Stage
				041-060	TV
				061-080	Architectural
				081-100	Theatre
				101-120	Stage 2
					DIMMER DELAY TIME
				121	0.1Sec.
				122	0.2Sec.
				123	0.3Sec.
				124	0.4Sec.
				125	0.5Sec.
				126	0.6Sec.
				127	0.7Sec.
				128	0.8Sec.
				129	0.9Sec.
				130	1.0Sec.
		131	1.5Sec.		
		132	2.0Sec.		
		133	3.0Sec.		
		134	4.0Sec.		
		135	5.0Sec.		
		136	6.0Sec.		
		137	7.0Sec.		
		138	8.0Sec.		
		139	9.0Sec.		
		140	10Sec.		
		141-255	Default to Unit Setting		

1 CH	2 CH	3 CH	6 CH	VALUES	FUNCTIONS	
			5		REFRESH RATE	
					000-015	Default to Unit Setting
					016-030	900HZ
					031-045	1000HZ
					046-060	1100HZ
					061-075	1200HZ
					076-090	1300HZ
					091-105	1400HZ
					106-120	1500HZ
					121-135	2500HZ
					136-150	4000HZ
					151-165	5000HZ
					166-180	6000HZ
					181-195	10000HZ
					196-210	15000HZ
				211-225	20000HZ	
				226-255	25000HZ	
			6		GAMMA	
					000-020	Default to Unit Setting
					021-040	1.0
					041-060	2.0
					061-080	2.2
					081-100	2.4
					101-120	2.6
					121-130	2.8
				131-255	No Function	