

2 Ch	4 Ch	Modes 13 Ch	14 Ch	16 Ch	DMX Values	Function
		1	1	1	000-255	Red 0% - 100%
		2	2	2	000-255	Green 0% - 100%
		3	3	3	000-255	Blue 0% - 100%
		4	4	4	000-255	White 0% - 100%
		5	5	5	000-255	Amber 0% - 100%
		6	6	6	000-255	Lime 0% - 100%
	1	7	7	7	000-024 025-100 101-255	COLOR TEMPERATURE LINEAR OFF 2500K-10000K 10000K
	2	8	8	8	000-031 032-076 077-121 122-166 167-211 212-255	COLOR TEMPERATURE PRESETS No Function 2700K 3200K 4000K 5600K 6500K
		9	9	9	0 001 - 255	COLOR TEMPERATURE RED to GREEN No Function Shift CT Red to Green
		10	10	10	000 - 255	64 Color Macros See Color Macros Chart
		11	11	11	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255 248 - 255	Shutter Shutter Closed (LEDs OFF) Shutter OPEN (LEDs ON) Strobe effect slow to fast Shutter OPEN (LEDs ON) Pulse effect in sequences Shutter OPEN (LEDs ON) Random strobe effect slow to fast Shutter OPEN (LEDs ON) Open
1	3	12	12	12	000 - 255	Dimmer Coarse 8bit
2	4	13	13	13	000 - 255	Dimmer Fine 16bit
			14	14	000 - 020 021 - 040 041 - 060 061 - 080 081 - 100 101 - 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 - 255	Dim Modes Standard Stage TV Architectural Theatre Stage 2 Dimming Speed 0.1 s 0.2 s 0.3 s 0.4 s 0.5 s 0.6 s 0.7 s 0.8 s 0.9 s 1 s 1.5 s 2 s 3 s 4 s 5 s 6 s 7 s 8 s 9 s 10 s Default to Unit Setting
				15	000-020 021-040 041-060 061-080 081-255	Dim Curves Linear Square Inv. Squa S. Curve No Function

				LED Refresh Rates	
				0 - 10	Default
				11	900 Hz
				12	910 Hz
				13	920 Hz
				14	930 Hz
				15	940 Hz
				16	950 Hz
				17	960 Hz
				18	970 Hz
				19	980 Hz
				20	990 Hz
				21	1000 Hz
				22	1010 Hz
				23	1020 Hz
				24	1030 Hz
				25	1040 Hz
				26	1050 Hz
				27	1060 Hz
				28	1070 Hz
				29	1080 Hz
				30	1090 Hz
				31	1100 Hz
				32	1110 Hz
				33	1120 Hz
				34	1130 Hz
				35	1140 Hz
				36	1150 Hz
				37	1160 Hz
				38	1170 Hz
				39	1180 Hz
				40	1190 Hz
				41	1210 Hz
				42	1220 Hz
				43	1230 Hz
			16	44	1240 Hz
				45	1250 Hz
				46	1260 Hz
				47	1270 Hz
				48	1280 Hz
				49	1290 Hz
				50	1300 Hz
				51	1310 Hz
				52	1320 Hz
				53	1330 Hz
				54	1340 Hz
				55	1350 Hz
				56	1360 Hz
				57	1370 Hz
				58	1380 Hz
				59	1390 Hz
				60	1400 Hz
				61	1410 Hz
				62	1420 Hz
				63	1430 Hz
				64	1440 Hz
				65	1450 Hz
				66	1460 Hz
				67	1470 Hz
				68	1480 Hz
				69	1490 Hz
				70	1500 Hz
				71	2500 Hz
				72	4000 Hz
				73	5000 Hz
				74	6000 Hz
				75	10kHz
				76	15kHz
				77	20kHz
				78	25kHz
				79	Disable
				080 - 255	No Function