

Entour Faze	DMX Mode
-------------	----------

**DMX Mode:**

The Entour Faze has 3 DMX channel modes; 1 channel mode, 2 channel mode, and 4 channel mode. See page 13 for the DMX traits.

1. This function will allow you to control each individual fixtures traits with a standard DMX 512 controller.
2. Press the MENU button until “AXXX” is displayed. “XXX” represents the current DMX channel address. Press the UP or DOWN buttons to find your desired DMX address.
3. To select your desired channel mode press the MENU button until “CXXX” is displayed. “XXX” represents the current DMX channel mode. Press the UP or DOWN buttons to find your desired DMX channel mode.
4. Connect your DMX controller to the unit.
5. When 4 channel mode is selected, after about 5 seconds the screen will change to the display shown below.

**NOTE:** Duration and Interval setting is only available in 4 Channel mode.

**When you have finished fogging the display will read “PICL”. This process is cleaning the excess fluid out of the pump and tubing. After this process is done the display will show “Stby”.**

**NOTE: Please let this process run its course before shutting off the faze machine.**

Entour Faze		1 Channel Mode
Channel	Value	Function
1	0 - 255	OUTPUT VOLUME 0% - 100% OUTPUT VOLUME

Entour Faze		2 Channel Mode
Channel	Value	Function
1	0 - 255	OUTPUT VOLUME 0% - 100% OUTPUT VOLUME
2	0 - 127 128 - 255	FAN OFF ON

Entour Faze		4 Channel Mode
Channel	Value	Function
1	0 - 255	OUTPUT VOLUME 0% - 100% OUTPUT VOLUME
2	0 - 127 128 - 255	FAN OFF ON
3	0 - 9 10 - 255	DURATION 0 SECONDS 10 - 255 SECONDS
4	0 - 1 9 - 255	INTERVAL 0 SECONDS 5 - 255 SECONDS