

**1 CHANNEL MODE**

Channel	Value	Function
1	0 - 255	DIMMER 0% - 100%

**2 CHANNEL MODE**

Channel	Value	Function
1	0 - 255	DIMMER 0% - 100%
2	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	Shutter Closed (LEDs OFF) Shutter OPEN (LEDs ON) Strobe effect slow – fast Shutter OPEN (LEDs ON) Pulse effect in sequences Shutter OPEN (LEDs ON) Random strobe effect slow - fast Shutter OPEN (LEDs ON)
		strobing

**3 CHANNEL MODE**

Channel	Value	Function
1	0 - 255	Dimmer 0% - 100%
2	0 - 255	Dimming fine
3	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	Shutter Closed (LEDs OFF) Shutter OPEN (LEDs ON) Strobe effect slow – fast Shutter OPEN (LEDs ON) Pulse effect in sequences Shutter OPEN (LEDs ON) Random strobe effect slow - fast Shutter OPEN (LEDs ON)
		strobing

**4 CHANNEL MODE**

Channel	Value	Function
1	0 - 255	Dimmer 0% - 100%
2	0 - 255	Dimming fine
3	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	Shutter Closed (LEDs OFF) Shutter OPEN (LEDs ON) Strobe effect slow – fast Shutter OPEN (LEDs ON) Pulse effect in sequences Shutter OPEN (LEDs ON) Random strobe effect slow - fast Shutter OPEN (LEDs ON)
		strobing
4	0 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 120 121 - 255	Standard Stage Tv Architectural Theatre Stage 2 Default to dimmer curve setting
		Dimmer curves