

DTW BAR 1000TM

user manual



©2016 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

ELATION PROFESSIONAL and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Elation Professional USA | 6122 S. Eastern Ave. | Los Angeles, CA. 90040 323-582-3322 | 323-832-9142 fax | www.elationlighting.com | info@elationlighting.com

Elation Professional B.V. | Junostraat 2 | 6468 EW Kerkrade, The Netherlands +31 45 546 85 66 | +31 45 546 85 96 fax | www.elationlighting.eu | info@elationlighting.eu

DOCUMENT VERSION



Please check www.elationlighting.com for the latest revision/update of this manual.

Date	Document Version	Software Version	DMX Channel Modes	Notes
07/07/16	1	≥1.05	01 / 02 / 03 / 05 / 06 / 07 10 / 12 / 15 / 36 / 41 / 45	Initial release.



CONTENTS

General Information	4
Warranty	6
Safety Instructions	7
General Guidelines	8
Fixture Overview	9
Fixture Installation	10
Fixture Menu	12
DMX Channel Functions And Values	17
Cleaning and Maintenance	22
Technical Specifications	23
Optional Accessories	25



GENERAL INFORMATION

INTRODUCTION

Congratulations, you have just purchased one of the most innovative and reliable lighting fixtures on the market today! The fixture has been designed to perform reliably for years when the guidelines in this booklet are followed. Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during use and maintenance.

UNPACKING

Every fixture has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for damage and be sure all accessories necessary to operate the unit have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this unit to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

BOX CONTENTS

- (1) powerCON Cable
- (1) Frost Filter
- (1) Glare Shield
- (3) Frost Filter/Glare Shield Mounting Screws
- Manual & Warranty Card



CUSTOMER SUPPORT

Elation Professional® provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.elationlighting.com for any comments or suggestions. For service related issue please contact Elation Professional®.

ELATION SERVICE USA - Monday - Friday 8:00am to 5:00pm PST

Voice: 323-582-3322 Fax: 323-832-9142

E-mail: support@elationlighting.com

ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

Voice: +31 45 546 85 30 Fax: +31 45 546 85 96

E-mail: support@elationlighting.eu

WARRANTY REGISTRATION

Please complete and mail in the enclosed warranty card or register online: http://www.elationlighting.com/Login.aspx to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

IMPORTANT NOTICE!

There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufactures warranty. Damages resulting from modifications to this fixture and/or the disregard of safety and general user instructions found in this user manual void the manufactures warranty and are not subject to any warranty claims and/or repairs.



LIMITED WARRANTY

- A. Elation Professional® hereby warrants, to the original purchaser, Elation Professional® products to be free of manufacturing defects in material and workmanship for a period of two years (730 days), and Elation Professional® product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, send the product only to the Elation Professional® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional® will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional® shall have no liability what so ever for loss and/or or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional® factory unless prior written authorization was issued to purchaser by Elation Professional®; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.
- D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional®. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.
- E. Elation Professional® reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional® be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.
- G. This warranty is the only written warranty applicable to Elation Professional® products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.



SAFETY INSTRUCTIONS



This fixture is an extremely sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow the guidelines in this manual. The manufacturer of this device will not accept responsibility for damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual.



This device falls under **PROTECTION CLASS 1**. It's essential this device be grounded properly. Only qualified personnel should perform all electrical connections.



INDOORS USE ONLY!
DONOT EXPOSE FIXTURE RAIN AND MOISTURE!



UNPLUG POWER BEFORE SERVICING FIXTURE!

DO NOT PLUG FIXTURE INTO A DIMMER PACK!

NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!



NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!

- For proper operation, follow the **Installation** guidelines described in this manual. Only qualified
 and certified personnel should perform installation of this fixture and only the original rigging parts
 (brackets) included with this fixture should be used for installation. Any modifications will void the
 original manufactures warranty and increase the risk of damage and/or personal injury.
- Never look directly into the light source of this fixture to prevent risk of injury to your retina, which
 may induce blindness. Those suffering from EPILEPSY should avoid looking directly into the light
 source of this unit at all times.
- The fan and air inlets must remain clean and never blocked. Allow approx. 6" (15cm) between this fixture and other devices or a wall for proper cooling.
- Always disconnect from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.
- Do not operate this fixture if the power cord has become frayed, crimped and/or damaged. If the power cord is damaged, replace it immediately with a new one of similar power rating.



GENERAL GUIDELINES


• NEVER OPEN THIS FIXTURE WHILE IN USE!

- During the initial operation of this fixture, a light smoke or smell may emit from the
 interior of the fixture. This is a normal process and is caused by excess paint in the
 interior of the casing burning off from the heat associated with the lamp and will
 decrease gradually over time.
- This fixture is a professional lighting effect designed for INDOOR / DRY LOCATIONS
 ONLY on stage, in nightclubs, theatres, etc.
- Please make sure there are NO FLAMMABLE MATERIALS close to the fixture while operating, to prevent any fire hazard.
- The fixture must be installed in a location with adequate ventilation, at least 1.5 feet (.5m) from adjacent surfaces. Be sure no air ventilation slots are blocked.
- DO NOT attempt installation and/or operation without knowledge how to do so.
- **DO NOT** permit operation by persons who are not qualified to operate this type of fixture. Most damages are the result of operations by nonprofessionals.
- Consistent operational breaks may ensure the fixture will function properly for many years to come.
- **DO NOT** shake fixture, avoid brute force when installing and/or operating fixture.
- Always install the fixture with an appropriate safety cable. When installing the
 fixture in a suspended environment, always use mounting hardware that is no less
 than M10 x 25 mm, also be sure the hardware is insert in the pre-arranged screw
 holes in the bracket of the fixture.
- Use the original packaging and materials to transport the fixture in for service.
- DO NOT TOUCH the housing bare-hand during its operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before replacing or serving.

RIGGING POINT



FIXTURE OVERVIEW

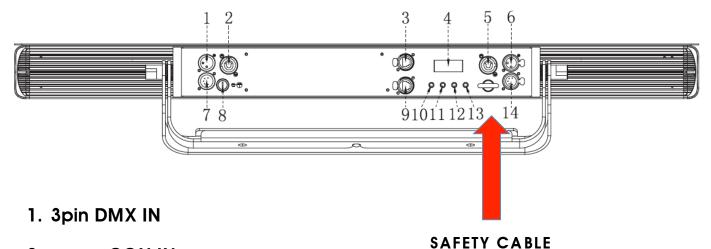

- 2. powerCON IN
- 3. RJ45 NET IN
- 4. LCD Menu Control Display
- 5. powerCON OUT
- 6. 3pin DMX OUT
- 7. 5pin DMX IN
- 8. FUSE
- 9. RJ45 NET OUT
- 10. Mode Button
- 11.UP Button
- 12. DOWN Button
- 13. ENTER Button
- 14.5pin DMX OUT



FIXTURE INSTALLATION



FLAMMABLE MATERIAL WARNING

Keep fixture at least 5.0 ft (1.5m) away from any flammable materials, decorations, pyrotechnics, etc.



ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.

CAUTIONS

- For added protection, mount the fixture in areas outside walking paths, seating areas, or in areas were unauthorized personnel might reach the fixture.
- Ambient operating temperature range for this fixture is 5° to 113°F. (-15° to 45°C)
 Do not use the fixture under or above this temperature.
- Before mounting the fixture to any surface, make sure the installation area can hold a minimum point load of 10 times the weight of the fixture.
- Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.
- Never stand directly below the device when mounting, removing or servicing.

POWER LINKING

Max number of units that can be power linked is 7 units @110V and 15 units @240V.


CLAMP MOUNTING

The fixture provides an integrated dual yoke bracket. Make sure to secure appropriately rated clamps to the mounting bracket using M10 screws when mounting this fixture to truss.



MOUNTING POINTS

Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury. Fixture is fully operational in the specific mounting positions as illustrated below.

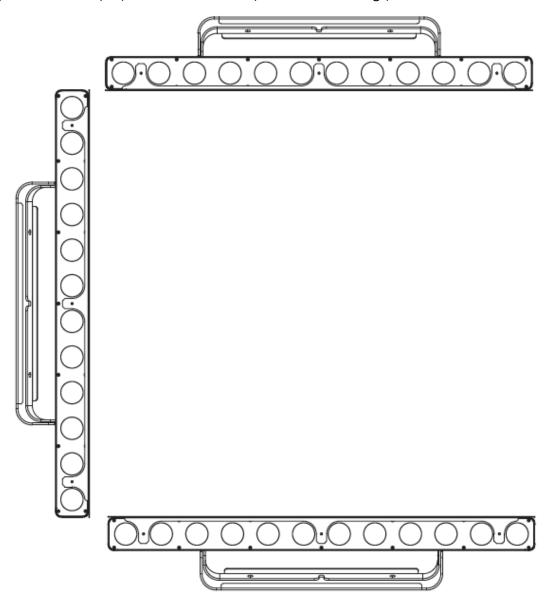

SAFETY CABLE

ALWAYS USE A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT DROP IF THE CLAMP FAILS.



FIXTURE MENU


ON-BOARD SYSTEM MENU

The fixture comes with an easy to navigate system menu. The next section will detail the functions of each command in the system menu.

LCD MENU CONTROL PANEL


The control panel (see image below) located on back of the fixture allows you to access the main menu and make all necessary adjustments to the fixture. During normal operation, pressing MODE button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the UP and DOWN buttons. Once you reach a field that requires adjusting, press the ENTER button to activate that field and use the UP and DOWN buttons to adjust the field. Pressing the ENTER button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the MODE button.

NOTE: the LCD Menu Control Display will shut OFF and lockout after 30 seconds of no use. Press and hold the MODE button for 10 seconds to unlock the LCD display.

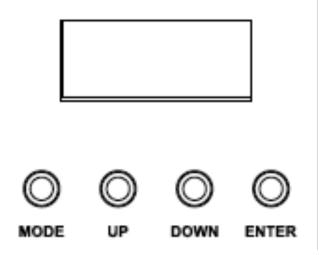

INFORMATION DISPLAYED DURING INITIAL POWER ON

When the fixture is initially powered ON, the display shows the following information:

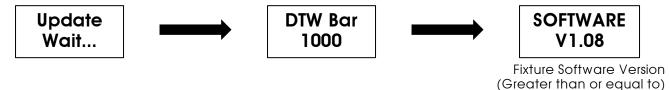



		ELATION© DTWB/ SYSTEM M									
	Features are subject to change without any prior written notice.										
MENU	OPTIONS / VALUES (Def		DESCRIPTION								
DMX MODE ADDR:xxx CH:xx	ADDR: 001 - 512 CH: 01 , 02, 03, 05, 06, 10, 12, 15, 36, 41, 45		Set DMX Address. Set DMX Channel Mode.								
SLAVE M O D E			Set unit to Slave Mode.								
AUTO RUN FQN:xx	FQN: 01 -99		Set the number of times each internal macro will repeat before moving to the next macro.								
01STATIC - 15FLOW1	01 -15		Select Internal Program Macro. See PROGRAM MACROS for more details.								
DimCurve	Standard , Stage, TV, A	rchitec, Theatre	Set desired Dimming Curve.								
Flip	ON, OFF		Set starting LED. See FLIP Section for more details.								
NO DMX	Hold, Blackout, Program	m	Define how fixture reacts when NO DMX signal present.								
Manual	WW 000 -255 CW 000 -2 A 000 -255STR: 00 -99	255	Set Warm White, Cool White, Amber, and Strobe Values manually.								
Macros	00 -07		Select Internal Color Macro. See COLOR MACROS for more details.								
Whitebal	WW000- 255 CW000- 2	255 A000-255	Adjust White Balance for each LED. NOTE: Reset to Default does NOT change these values.								
	Fix ID Ser PIN	Ser PIN Pass=000	Enter Passcode 050 to access IP Address and Universe Network Menus.								
Net Set Fix ID	Fix ID IP Addr	000.000 000.000	Set fixture IP Address.								
	Fix ID Universe	0	Set fixture Universe.								
Net Set Pro Set	K - Net, ArtNet		Set Protocol (Kling-Net or ArtNet)								
Net Set Net Swi	ON, OFF		Set Ethernet Switch.								
Default	OFF, ON		Reset fixture to factory default settings.								



	ELATION© DTV P R O G R A M	
	Fix OGRAM Features subject to change wi	
MACRO	OPTIONS / VALUES	DESCRIPTION
01.STATIC	CL: BLAC , WW, CW, A, WA F 00 -99	Static Colors Fade Adjustable
02.DREAM	SP 00 -99 F 00 -99	All Color Dreaming Sequence Speed & Fade Adjustable
03.METEOR	SP 00 -99 F 00 -99	All Color Flow Sequence Speed & Fade Adjustable
04.FADE	SP 00 -99 F 00 -99	All Color Fade Sequence Speed & Fade Adjustable
05.CHANGE	SP 00 -99 F 00 -99	All Color Change Sequence Speed & Fade Adjustable
06.FLOW 1	SP 00 -99 F 00 -99	All Color Chase Sequence Speed & Fade Adjustable
07.FLOW 2	SP 00 -99 F 00 -99	All Color Chase Sequence Speed & Fade Adjustable
08.FLOW 3	SP 00 -99 F 00 -99	All Color Chase Sequence Speed & Fade Adjustable
09.FLOW 4	SP 00 -99 F 00 -99	All Color Chase Sequence Speed & Fade Adjustable
10.FLOW 5	SP 00 -99 F 00 -99	All Color Chase Sequence Speed & Fade Adjustable
11.FLOW 6	SP 00 -99 F 00 -99	All Color Chase Sequence Speed & Fade Adjustable
12.FLOW 7	SP 00 -99 F 00 -99	All Color Chase Sequence Speed & Fade Adjustable
13.FLOW 8	SP00-99 F00-99 C1:BLAC, WW, CW, A C2:BLAC, WW, CW, A	2 Selectable Color Chase Speed & Fade Adjustable
14.FLOW 9	SP 00 -99 F 00 -99 C1: BLAC , WW, CW, A C2: BLAC , WW, CW, A	2 Selectable Color Chase Speed & Fade Adjustable
15.FLOW 1	SP 00 -99 F 00 -99	Seven Color Chase Speed & Flash Adjustable




	ELATION© DTWBAR 1000™										
	COLOR MACROS										
Actual c	colors may vary and subject to change without notice.										
MACRO #	COLOR MACRO										
00	OFF										
01	WARM WHITE										
02	COOL WHITE										
03	AMBER										
04	WARM WHITE + COOL WHITE										
05	WARM WHITE + AMBER										
06	COOL WHITE + AMBER										
07	WARM WHITE + COOL WHITE + AMBER										
	NO FUNCTION										

DIMMING CURVES

The **DimCurve** menu allows you to select one of the following preset dimming curves: **Standard, Stage, TV, Architectural, Theatre,** or **Default**.

(See diagram below for more details)

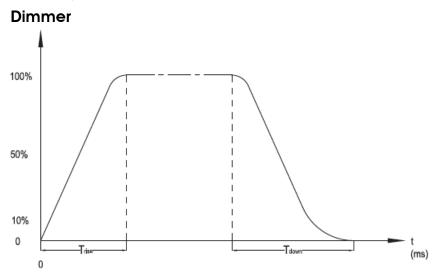


Ramp Effect	02	55 OS (Fade Time)	0_	1S (Fade Time)		
namp Enect	Trise (ms)	Tdown (ms)	Trise (ms)	Tdown (ms)		
Standard	0	0	0	0		
Stage	780	1100	1540	1660		
TV	1180	1520	1860	1940		
Architectural	1380	1730	2040	2120		
Theatre	1580	1940	2230	2280		



PIXEL FLIP

Select the desired starting LED module and chase direction from one of the following modes below via **UP/DOWN** buttons and then press **ENTER** to confirm.

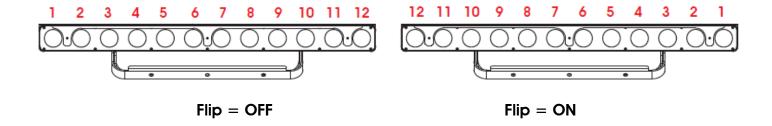

WHITE BALANCE

Select the desired white balance settings for each LED separately.

WW000-**255** CW000-**255** A000-**255**

NOTE: Reset to Default does NOT change these values.



DMX CHANNEL FUNCTIONS AND VALUES

ELATION© DTW BAR 1000™

DMX Channel Values / Functions (44 DMX Channels)

	*Control of LEDs depends on the Pixel Flip se DMX CHANNEL MODE												Г
1CH	2CH	3СН	5CH	6СН	7CH	10CH	12CH	15CH	36CH	41CH	45CH	VALUE	FUNCTION
1	1											0-255	DIM TO WARM - All LEDS [1-12] 1,800K - 3,200K (0=Black - 255=100%)
		1	1	1	1	1						0-255	COOL WHITE - All LEDs [1-12] Cool White (0=Black - 255=100%)
		2	2	2	2	2						0-255	WARM WHITE - All LEDs [1-12] Warm White (0=Black - 255=100%)
		3	3	3	3	3						0-255	AMBER - All LEDs [1-12] Amber (0=Black - 255=100%)
												0.00	COLOR MACROS
												0-30	NO Function
												31-61	WARM WHITE COOL WHITE
												62-92 93-123	AMBER
						4						124-154	WARM WHITE + COOL WHITE
												155-185	WARM WHITE + AMBER
												186-216	COOL WHITE + AMBER
												217-247	WARM WHITE + COOL WHITE + AMBER
												248-255	NO Function
							_	_					DIM TO WARM - LEDS [1]
							1	1				0-255	1,800K - 3,200K (0=Black - 255=100%)
							0					0.055	DIM TO WARM - LEDS [2]
							2	2				0-255	1,800K - 3,200K (0=Black - 255=100%)
							3	3				0-255	DIM TO WARM - LEDS [3] 1,800K - 3,200K (0=Black - 255=100%)
							4	4				0-255	DIM TO WARM - LEDS [4]
							_	_					1,800K - 3,200K (0=Black - 255=100%) DIM TO WARM - LEDS [5]
							5	5				0-255	1,800K - 3,200K (0=Black - 255=100%)
							6	6				0-255	DIM TO WARM - LEDS [6] 1,800K - 3,200K (0=Black - 255=100%)
							7	7				0-255	DIM TO WARM - LEDS [7] 1,800K - 3,200K (0=Black - 255=100%)
							8	8				0-255	DIM TO WARM - LEDS [8] 1,800K - 3,200K (0=Black - 255=100%)
							9	9				0-255	DIM TO WARM - LEDS [9] 1,800K - 3,200K (0=Black - 255=100%)
							10	10				0-255	DIM TO WARM - LEDS [10] 1,800K - 3,200K (0=Black - 255=100%)
							11	11				0-255	DIM TO WARM - LEDS [11] 1,800K - 3,200K (0=Black - 255=100%)
							12	12				0-255	DIM TO WARM - LEDS [12] 1,800K - 3,200K (0=Black - 255=100%)



DMX Channel Values / Functions (44 DMX Channels)

Table						DMX CH	IANNEL M		Ds depe	erias ori	IIIe i ke		illig.	
2 2 2 2 2 2 2 2 2 2	1CH	2CH	3СН	5CH	6СН	7СН	10CH	12CH	15CH	36CH	41CH	45CH	VALUE	FUNCTION
2 2 2 0-255										1	1	1	0-255	
A										2	2	2	0-255	WARM WHITE - LED [1]
A 4 4 0-255										3	3	3	0-255	AMBER - LED [1]
S S S S S S S S S S										4	4	4	0-255	COOL WHITE - LED [2]
6 6 6 0-255										5	5	5	0-255	WARM WHITE - LED [2]
7										6	6	6	0-255	AMBER - LED [2]
8 8 8 8 0-255 WARM WHITE - LED [3] Worm White (0-Black - 255 = 100%) 9 9 9 0-255 Amber (0-Black - 255 = 100%) 10 10 10 0-255 COOL WHITE - LED [4] Cool White (0-Black - 255 = 100%) 11 11 11 11 0-255 WARM WHITE - LED [4] Warm White (0-Black - 255 = 100%) 12 12 12 0-255 AMBER - LED [4] Warm White (0-Black - 255 = 100%) 13 13 13 0-255 COOL WHITE - LED [5] Cool White (0-Black - 255 = 100%) 14 14 14 0-255 WARM WHITE - LED [5] Warm White (0-Black - 255 = 100%) 15 15 15 0-255 Warm White (0-Black - 255 = 100%) 16 16 16 0-255 WARM WHITE - LED [6] Cool White (0-Black - 255 = 100%) 17 17 17 0-255 WARM WHITE - LED [6] Cool White (0-Black - 255 = 100%) 18 18 18 0-255 Warm White (0-Black - 255 = 100%) 19 19 19 0-255 WARM WHITE - LED [7] Cool White (0-Black - 255 = 100%) 20 20 20 20 WARM WHITE - LED [7] Warm White (0-Black - 255 = 100%) WARR WHITE - LED [7] Warm White (0-Black - 255 = 100%) WARR WHITE - LED [7] Warm White (0-Black - 255 = 100%) WARR WHITE - LED [7] Warm White (0-Black - 255 = 100%)										7	7	7	0-255	COOL WHITE - LED [3]
9 9 9 0-255										8	8	8	0-255	WARM WHITE - LED [3]
10 10 10 0-255 COOL WHITE - LED [4] Cool White (0=Black - 255=100%) WARM WHITE - LED [4] Warm White (0=Black - 255=100%) WARM WHITE - LED [4] Warm White (0=Black - 255=100%) AMBER - LED [4] Warm White (0=Black - 255=100%) AMBER - LED [4] Warm White (0=Black - 255=100%) AMBER - LED [5] Warm White (0=Black - 255=100%) WARM WHITE - LED [5] Warm White (0=Black - 255=100%) WARM WHITE - LED [5] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [6] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] WARM WHITE - LED [9	9	9	0-255	AMBER - LED [3]
11										10	10	10	0-255	COOL WHITE - LED [4]
12 12 12 0-255										11	11	11	0-255	WARM WHITE - LED [4]
13 13 13 0-255 COOL WHITE - LED [5] 14 14 14 0-255 WARM WHITE - LED [5] Warm White (0=Black - 255=100%) Warm White (0=Black - 255=100%) Warm White (0=Black - 255=100%) Amber (0=Black - 255=100%) Cool White (0=Black - 255=100%) Cool White (0=Black - 255=100%) Warm White (0=Black - 255=100%) Cool White (0=Black - 255=100%) Warm White (0=Black - 255=100%)										12	12	12	0-255	AMBER - LED [4]
14										13	13	13	0-255	COOL WHITE - LED [5]
15 15 15 0-255 AMBER - LED [5] Amber (0=Black - 255=100%) 16										14	14	14	0-255	WARM WHITE - LED [5]
COOL WHITE - LED [6] Cool White (0=Black - 255=100%) 17 17 17 0-255 WARM WHITE - LED [6] Warm White (0=Black - 255=100%) Warm White (0=Black - 255=100%) AMBER - LED [6] Amber (0=Black - 255=100%) 19 19 19 0-255 COOL WHITE - LED [7] Cool White (0=Black - 255=100%) WARM WHITE - LED [7] Cool White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) AMBER - LED [7] Warm White (0=Black - 255=100%) AMBER - LED [7]										15	15	15	0-255	AMBER - LED [5]
17 17 17 0-255 WARM WHITE - LED [6] Warm White (0=Black - 255=100%) AMBER - LED [6] Amber (0=Black - 255=100%) 19 19 19 0-255 COOL WHITE - LED [7] Cool White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) AMBER - LED [7]										16	16	16	0-255	COOL WHITE - LED [6]
18 18 18 0-255 AMBER - LED [6] Amber (0=Black - 255=100%) 19 19 19 0-255 COOL WHITE - LED [7] Cool White (0=Black - 255=100%) 20 20 20 0-255 WARM WHITE - LED [7] Warm White (0=Black - 255=100%) AMBER - LED [7]										17	17	17	0-255	WARM WHITE - LED [6]
19 19 19 0-255 COOL WHITE - LED [7] Cool White (0=Black - 255=100%) WARM WHITE - LED [7] Warm White (0=Black - 255=100%) AMBER - LED [7]										18	18	18	0-255	AMBER - LED [6]
20 20 20 0-255 WARM WHITE - LED [7] Warm White (0=Black - 255=100%) AMBER - LED [7]										19	19	19	0-255	COOL WHITE - LED [7]
AMBER - LED [7]										20	20	20	0-255	WARM WHITE - LED [7]
21 21 0-255 Amber (0=Black - 255=100%)										21	21	21	0-255	AMBER - LED [7]



DMX Channel Values / Functions (44 DMX Channels)

					DMX C	HANNEL I		LLD0 GC	2001100	on ine P		coig.	
1CH	2CH	3СН	5CH	6СН	7СН	10CH	12CH	15CH	36CH	41CH	45CH	VALUE	FUNCTION
									22	22	22	0-255	COOL WHITE - LED [8] Cool White (0=Black - 255=100%)
									23	23	23	0-255	WARM WHITE - LED [8] Warm White (0=Black - 255=100%)
									24	24	24	0-255	AMBER - LED [8] Amber (0=Black - 255=100%)
									25	25	25	0-255	COOL WHITE - LED [9] Cool White (0=Black - 255=100%)
									26	26	26	0-255	WARM WHITE - LED [9] Warm White (0=Black - 255=100%)
									27	27	27	0-255	AMBER - LED [9] Amber (0=Black - 255=100%)
									28	28	28	0-255	COOL WHITE - LED [10] Cool White (0=Black - 255=100%)
									29	29	29	0-255	WARM WHITE - LED [10] Warm White (0=Black - 255=100%)
									30	30	30	0-255	AMBER - LED [10] Amber (0=Black - 255=100%)
									31	31	31	0-255	COOL WHITE - LED [11] Cool White (0=Black - 255=100%)
									32	32	32	0-255	WARM WHITE - LED [11] Warm White (0=Black - 255=100%)
									33	33	33	0-255	AMBER - LED [11] Amber (0=Black - 255=100%)
									34	34	34	0-255	COOL WHITE - LED [12] Cool White (0=Black - 255=100%)
									35	35	35	0-255	WARM WHITE - LED [12] Warm White (0=Black - 255=100%)
									36	36	36	0-255	AMBER - LED [12] Amber (0=Black - 255=100%)
											37	0-255	DIM TO WARM - All LEDS [1-12] 1,800K - 3,200K (0=Black - 255=100%)
													COLOR MACROS
												0-30	NO Function
												31-61	WARM WHITE
												62-92	COOL WHITE
										37	38	93-123	AMBER
												124-154	WARM WHITE + COOL WHITE
												155-185	WARM WHITE + AMBER
												186-216	COOL WHITE + AMBER
												217-247 248-255	WARM WHITE + COOL WHITE + AMBER NO Function
												240-255	NO FUNCTION



DMX Channel Values / Functions (44 DMX Channels)

Features are subject to change without any prior written notice.

*Control of LEDs depends on the Pixel Flip setting.

		DMX CHANNEL MODE											
1CH	2CH	3СН	5CH	6СН	7СН	10CH	12CH	15CH	36CH	41CH	45CH	VALUE	FUNCTION
													SHUTTER / STROBE
												0-31	NO Function
												32-95	Variable Strobe Effect SLOW to FAST
					4	E				20	20	96-127	LEDs ON
					4	5				38	39	128-159	Pulse Effect In Sequence SLOW to FAST
												160-191	LEDs ON
												192-223	Random Strobe Effect SLOW to FAST
												224-255	LEDs ON
			4	4	5	6				39	40	0-255	MASTER DIMMER
			4	4	5	0				39	40	0-255	0 to 100%
			5	5	6	7				40	41	0-255	MASTER DIMMER FINE (16 bit)
			5	5	O	,				40	41	0-255	0 to 100%
													DIMMING CURVE MODES
												0-20	STANDARD
												21-40	STAGE
										41	42	41-60	TV
												61-80	ARCHITECTURAL
												81-100	THEATRE
												101-255	Default to Unit Setting
													COLOR MACROS
												0-30	NO Function
												31-61	WARM WHITE
												62-92	COOL WHITE
								13				93-123	AMBER
								10				124-154	WARM WHITE + COOL WHITE
												155-185	WARM WHITE + AMBER
												186-216	COOL WHITE + AMBER
												217-247	WARM WHITE + COOL WHITE + AMBER
												248-255	NO Function
													SHUTTER / STROBE
												0-31	NO Function
												32-95	Variable Strobe Effect SLOW to FAST
								14				96-127	LEDs ON
								'-				128-159	Pulse Effect In Sequence SLOW to FAST
												160-191	LEDs ON
												192-223	Random Strobe Effect SLOW to FAST
												224-255	LEDs ON



DMX Channel Values / Functions (44 DMX Channels)

					DMX CH	IANNEL N				1 11 10 1 10	<u> </u>		
1CH	2CH	3СН	5CH	6СН	7СН	10CH	12CH	15CH	36CH	41CH	45CH	VALUE	FUNCTION
													PROGRAM MACROS
												0-10	NO Function
												11-26	Program 01
												27-43	Program 02
												44-60	Program 03
												61-76	Program 04
												77-93	Program 05
						8					43	94-110	Program 06
												111-126	Program 07
												127-143	Program 08
												144-160	Program 09
												161-176	Program 10
												177-193	Program 11
												194-210	Program 12
												211-255	NO Function
						9					44		PROGRAM SPEED
						,						0-255	Program Speed SLOW to FAST
						10					45		PROGRAM FADE
											10	0-255	0-100%
													DIMMING CURVE MODES
												0-20	STANDARD
												21-40	STAGE
	2			6	7			15				41-60	TV
												61-80	ARCHITECTURAL
												81-100	THEATRE
												101-255	Default to Unit Setting



CLEANING AND MAINTENANCE



C A U

T

0

Ν

Disconnect power before cleaning or maintenance.

CLEANING

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics.

- Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation.
- Never use alcohol, solvents, or ammonia based cleaners.

MAINTENANCE

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electric check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Lose screws
 may fall out during normal operation resulting in damage or injury as larger parts
 could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and
 rigging points (ceiling, suspension, trussing). Deformations in the housing could
 allow for dust to enter into the fixture. Damaged rigging points or unsecured
 rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments. Never remove the ground prong from the power cable.



TECHNICAL SPECIFICATIONS

SOURCE

(12) 10W Multi-Chip CW / WW / Amber LEDs

100,000 Hour Average LED Life*

*May vary depending on several factors including but not limited to: Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control, and Dimming.

EFFECTS

Strobe and Chase Effects
Pixel Control
Variable and Selectable Dimming Curves

CONTROL / CONNECTIONS

(12) DMX Channel Modes (1 / 2 / 3 / 5 / 6 / 7 / 1 0 / 1 2 / 15 / 36 / 41 / 45)
4 Button Control Panel and LCD Menu Display
ArtNet + KlingNET Protocol Support
RDM (Remote Device Management)
(2) etherCON RJ45 In/Out
3pin and 5pin DMX In/Out
powerCON Power In/Out

SIZE / WEIGHT

Length: 35.4" (900mm)

Width: 8.1" (206.4mm) *with included shield

Vertical Height: 6.1" (155mm) Weight: 14.0 lbs. (6.4 kg)

ELECTRICAL / THERMAL

AC 110-240V - 50/60Hz

120W Max Power Consumption

Power Linking: 7pcs @110V / 15pcs @240V

5°F to 113°F (-15°C to 45°C)

APPROVALS / RATINGS


CE | cETLus | IP20



Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.



PHOTOMETRIC DATA

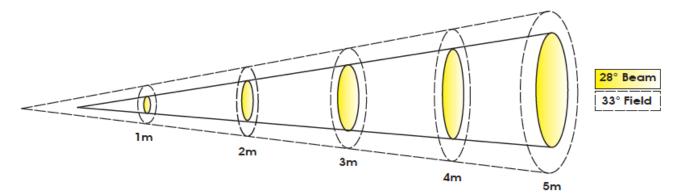


	1 m	3.3 ft
28° Beam Diameter	0.48	1.6
33° Field Diameter	0.59	1.9
	lux	fc
CW LEDs	3,561	331
WW LEDs	3,447	320
AMBER LEDs	1,166	108
FULL ON	6,425	597

2 m	6.6 ft
1.01	3.3
1.23	4.0
lux	fc
1,603	149
1,587	147
589	55
2,975	276

9.8 π
5.1
6.1
fc
84
81
30
151

4 m	13.1 ft
2.09	6.9
2.48	8.1
lux	fc
584	54
550	51
201	19
999	93

5 m	16.4 ft
2.62	8.6
3.12	10.2
lux	fc
382	35
379	35
138	13
686	64

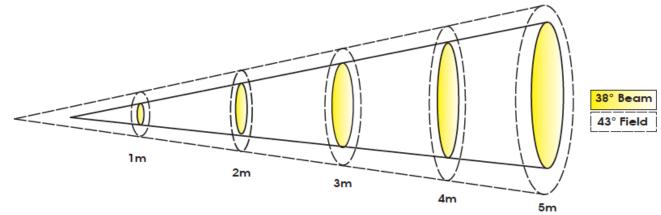

FROST FILTER	1 m	3.3 ft
38° Beam Diameter	0.69	2.3
48° Field Diameter	0.79 2.6	
	lux	fc
CW LEDs	1,920	178
WW LEDs	1,887	175
AMBER LEDs	651	60
FULL ON	3,196	297

2 m	6.6 ft
1.42	4.7
1.62	5.3
lux	fc
772	72
740	69
253	24
918	85


3 m	9.8 II
2.14	7.0
2.45	8.0
lux	fc
344	32
262	24
113	10
466	43


4 m	13.1 ft
2.87	9.4
3.27	10.7
lux	fc
227	21
211	20
77	7
282	26


5 m	16.4 ft
3.59	11.8
4.1	13.5
lux	fc
157	15
148	14
55	5
193	18



DIMENSIONAL DRAWINGS

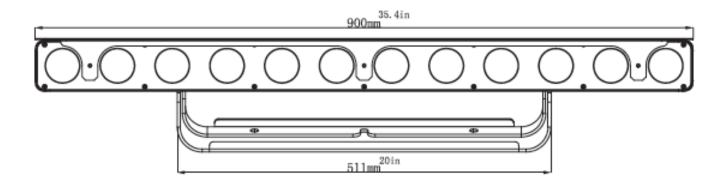

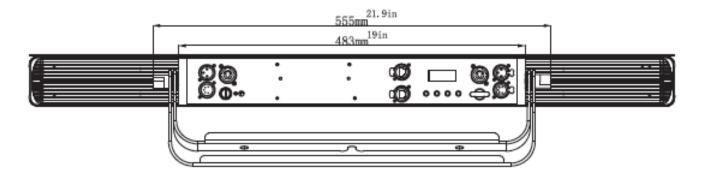

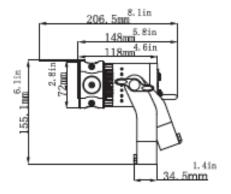

OPTIONAL ACCESSORIES

ORDER CODE	ITEM
TRIGGER CLAMP	Heavy Duty Wrap Around Hook Style Clamp
PLC3	3' (1m) powerCON PRO Link Cable
AC3PDMX5PRO	5 ft. (1.5m) 3pin PRO DMX Cable
AC5PDMX5PRO	5 ft. (1.5m) 5pin PRO DMX Cable
CAT005	5' (1.5m) CAT6 etherCON Cable
	Additional Cable Lengths Available