



DS-PROSTAGE




DS-PROSTAGE

1711000063	DS-PROSTAGE 200x100 MKII
1711000064	DS-PROSTAGE 100x100 MKII
1711000065	DS-PROSTAGE 200x50 MKII
1711000066	DS-PROSTAGE 100x50 MKII
1711000067	DS-PROSTAGE 100x100 ROUND MKII
1711000068	DS-PROSTAGE 100x100 TRIANGLE MKII
1711000069	DS-PROSTAGE 200x100 TRIANGLE LEFT MKII
1711000070	DS-PROSTAGE 200x100 TRIANGLE RIGHT MKII
1711000071	DS-PROSTAGE 200x100 TRUSSCUT RIGHT MKII
1711000072	DS-PROSTAGE 200x100 TRUSSCUT LEFT MKII
1711000073	DS-PROSTAGE 200x100 ROUND LEFT MKII
1711000074	DS-PROSTAGE 200x100 ROUND RIGHT MKII

TECHNICAL DATA


Frame	Aluminium (EN AW-6063 T66)
Material	Plywood 12 mm Black Heya
Max. Load	750 kg/m

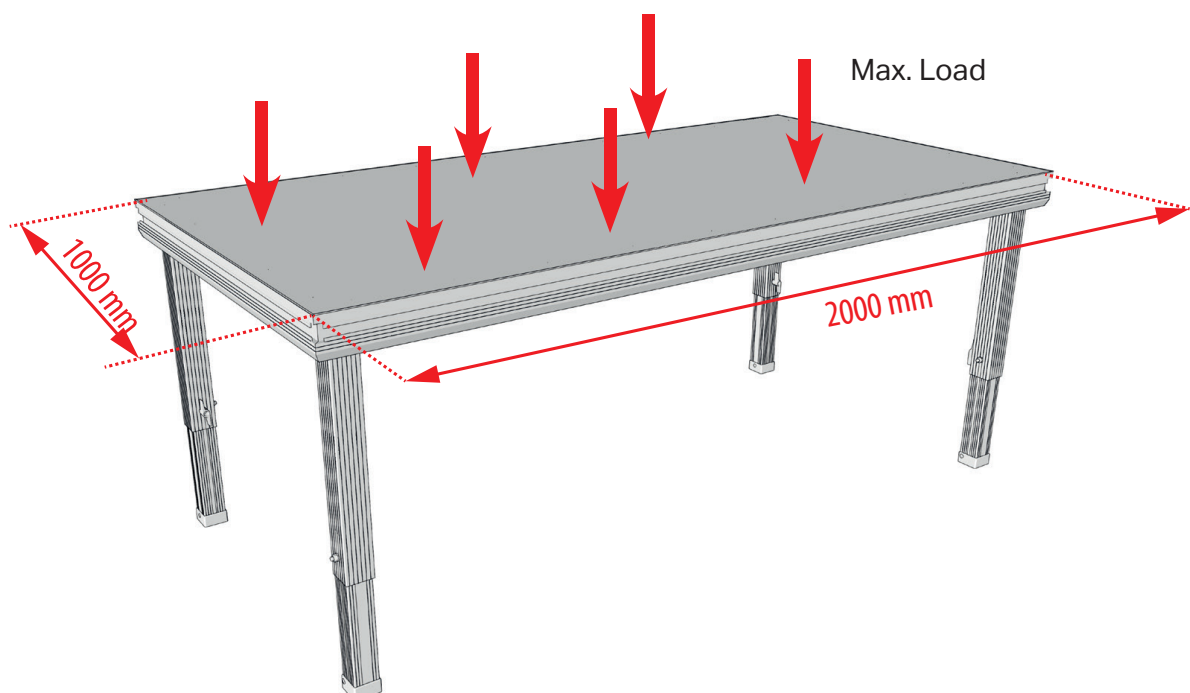



DS-PROSTAGE

1. Put the legs into the aluminium leg corners and fasten it with the control.

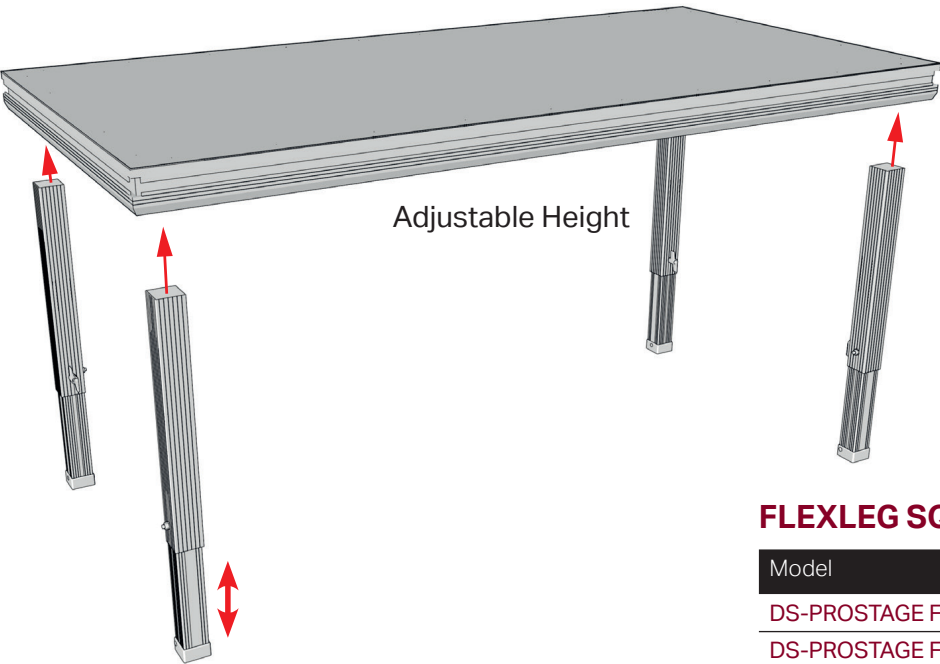


FLEXLEG SQUARE

Model	Code
DS-PROSTAGE FLEXLEG Square 40-60cm	1711000027
DS-PROSTAGE FLEXLEG Square 60-100cm	1711000028
DS-PROSTAGE FLEXLEG Square 80-140cm	1711000029

LEG SET SQUARE

Model	Code
DS-PROSTAGE LEG SET Square 20cm	1711000035
DS-PROSTAGE LEG SET Square 40cm	1711000036
DS-PROSTAGE LEG SET Square 60cm	1711000037
DS-PROSTAGE LEG SET Square 80cm	1711000038
DS-PROSTAGE LEG SET Square 100cm	1711000039

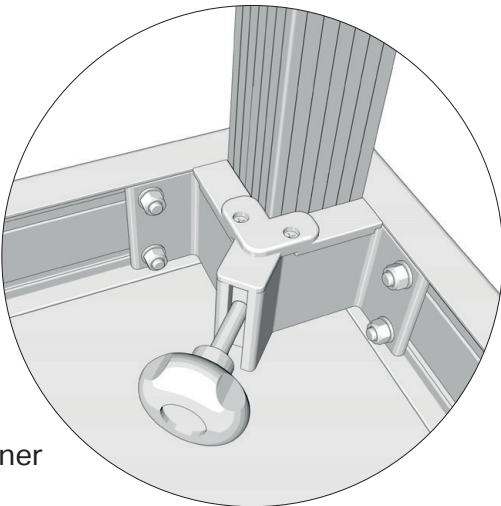


Aluminium Leg Corner





DS-PROSTAGE



2. Connect the platforms using the clamps below.

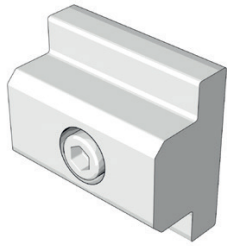


DS-PROSTAGE LEVELER
1711000022

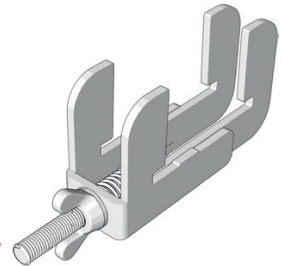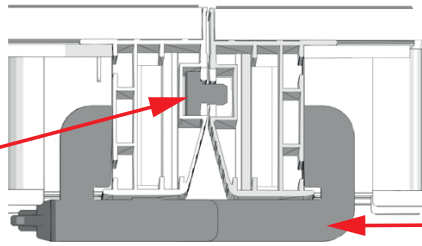


DS-PROSTAGE STAGECLAMP
1711000020

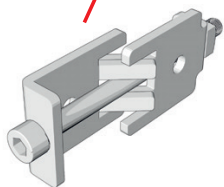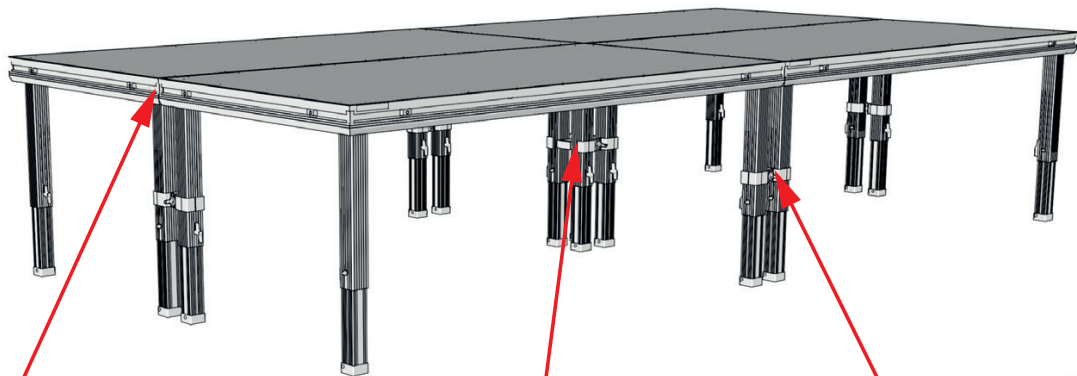

DS-PROSTAGE CONNECTOR
1711000021

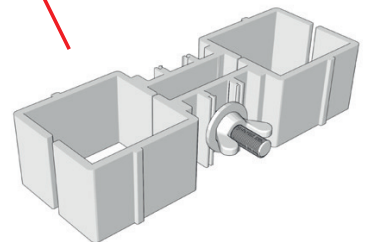

DS-PROSTAGE LEGCLAMP DUO
1711000041


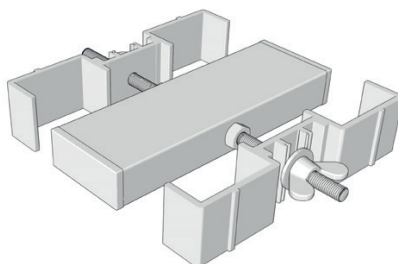


DS-PROSTAGE LEGCLAMP QUAD
1711000042





DS-PROSTAGE

3. Attach the handrail assembly clamps to the platform and mount the handrail to the clamps.

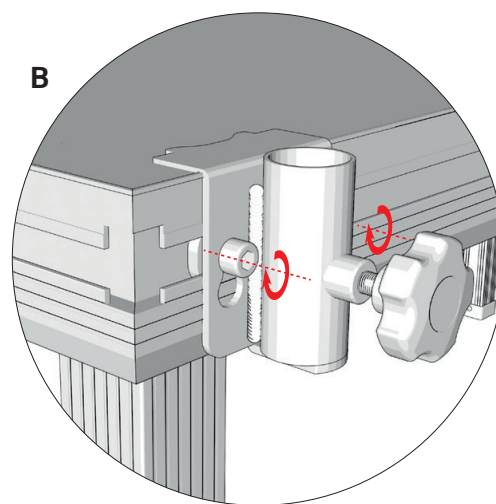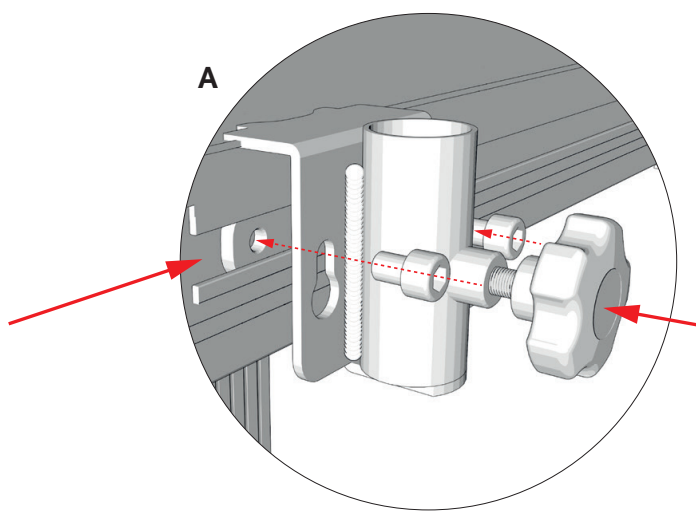



DS-PROSTAGE STAGERAIL ADAPTER
1711000016

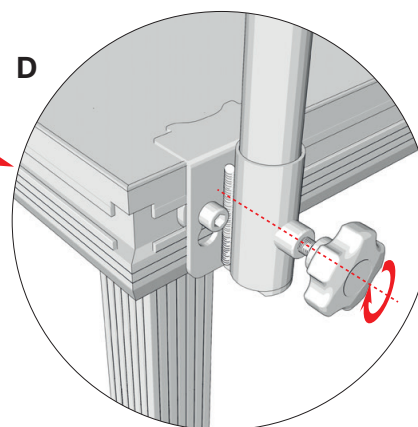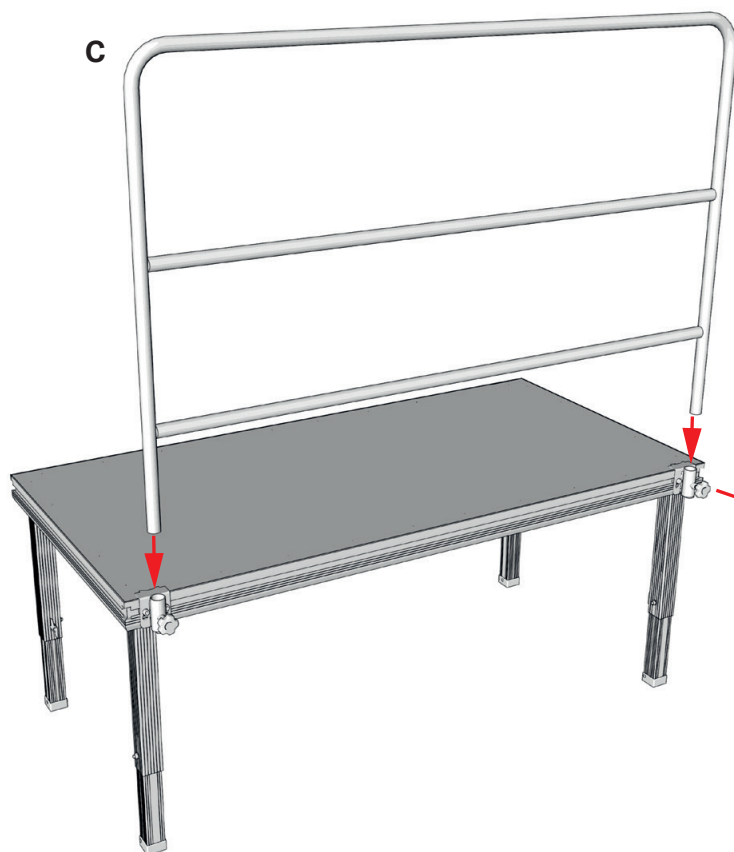




DS-PROSTAGE

4. Connect the handrails with the appropriate clamp.

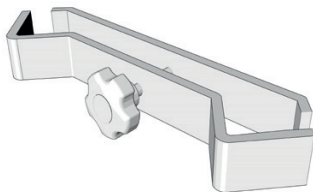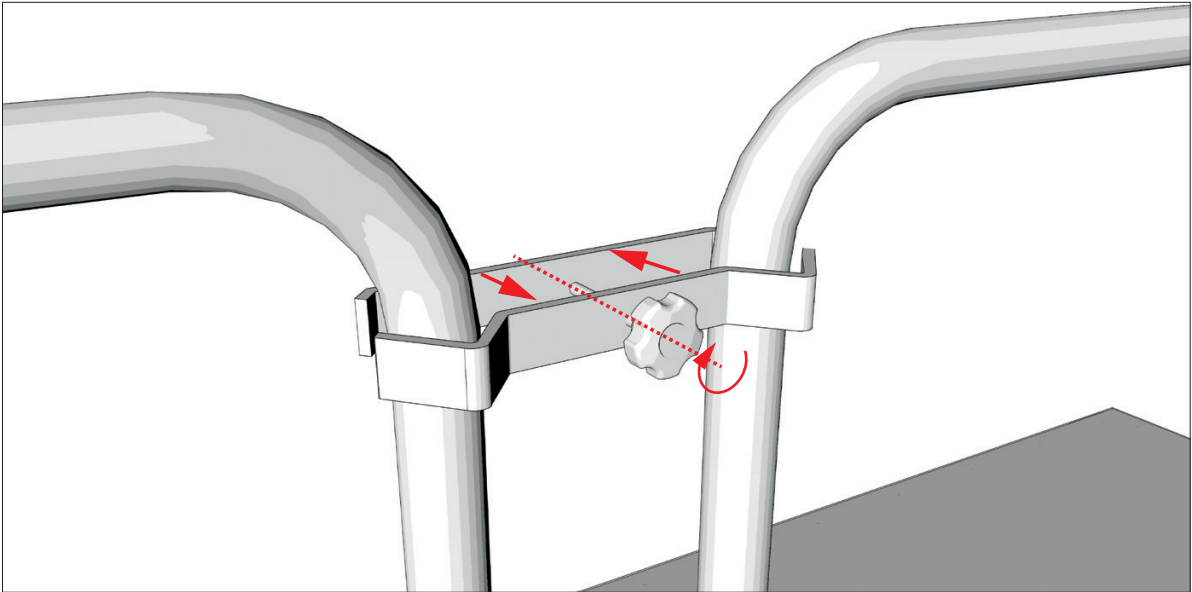

DS-PROSTAGE STAGERAIL CLAMP
1711000015

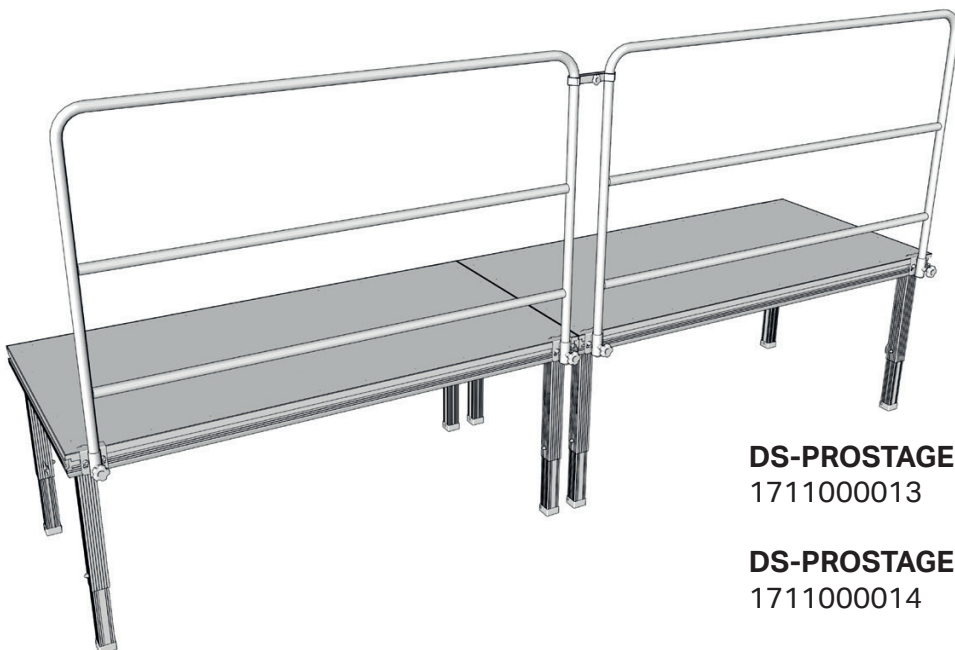

DS-PROSTAGE STAGERAIL 100
1711000013

DS-PROSTAGE STAGERAIL 200
1711000014






DS-PROSTAGE

5. Attach the stairs to the platforms.

DS-PROSTAGE FLEXSTAIR 60-100
1711000009

DS-PROSTAGE FLEXSTAIR 80-140
1711000010

DS-PROSTAGE FLEXSTAIR 100-180
1711000011

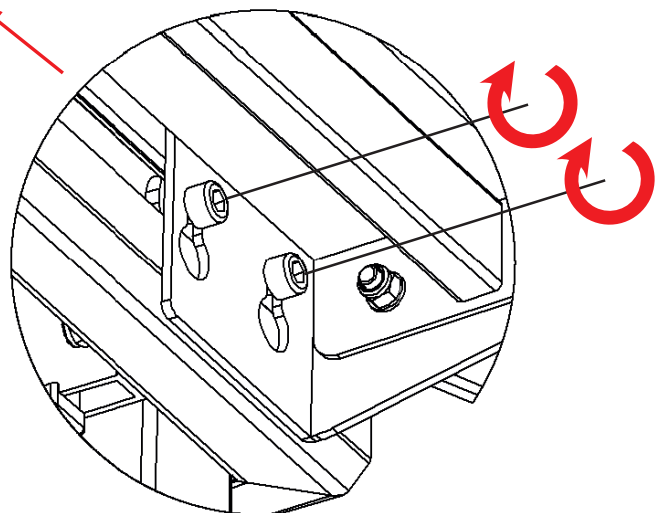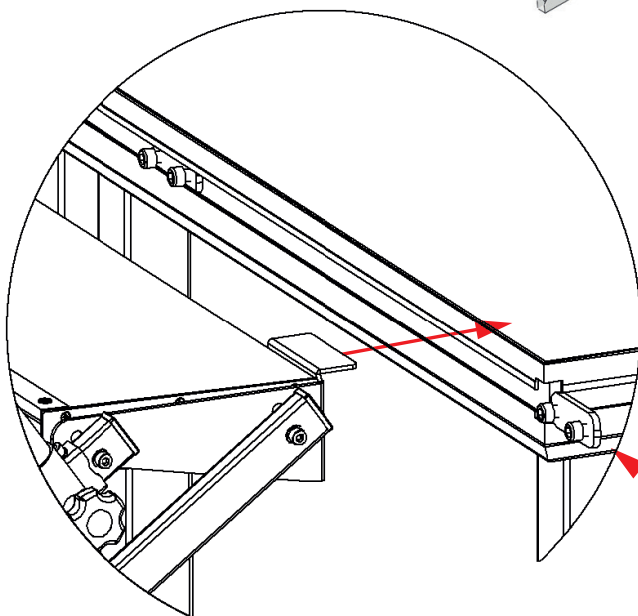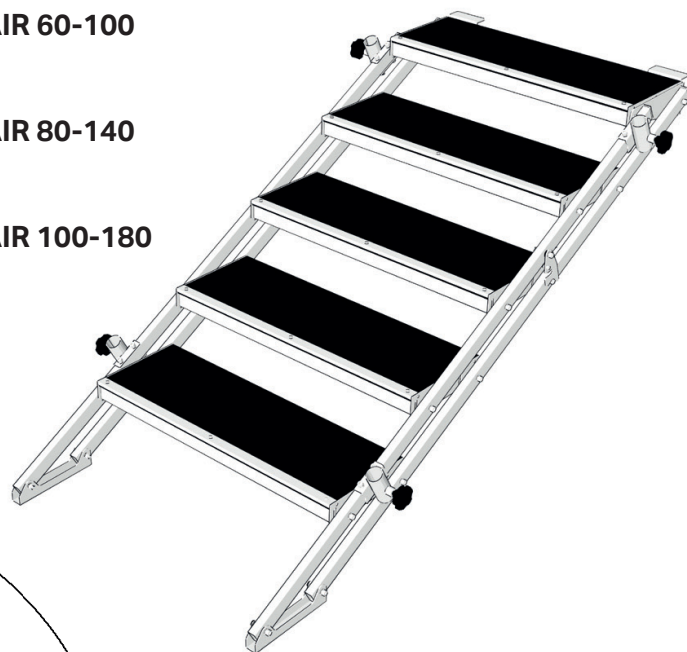




DS-PROSTAGE

6. Mount the handrail to the stairs.

DS-PROSTAGE STAIRRAIL FOR DS STAIR
1711000061

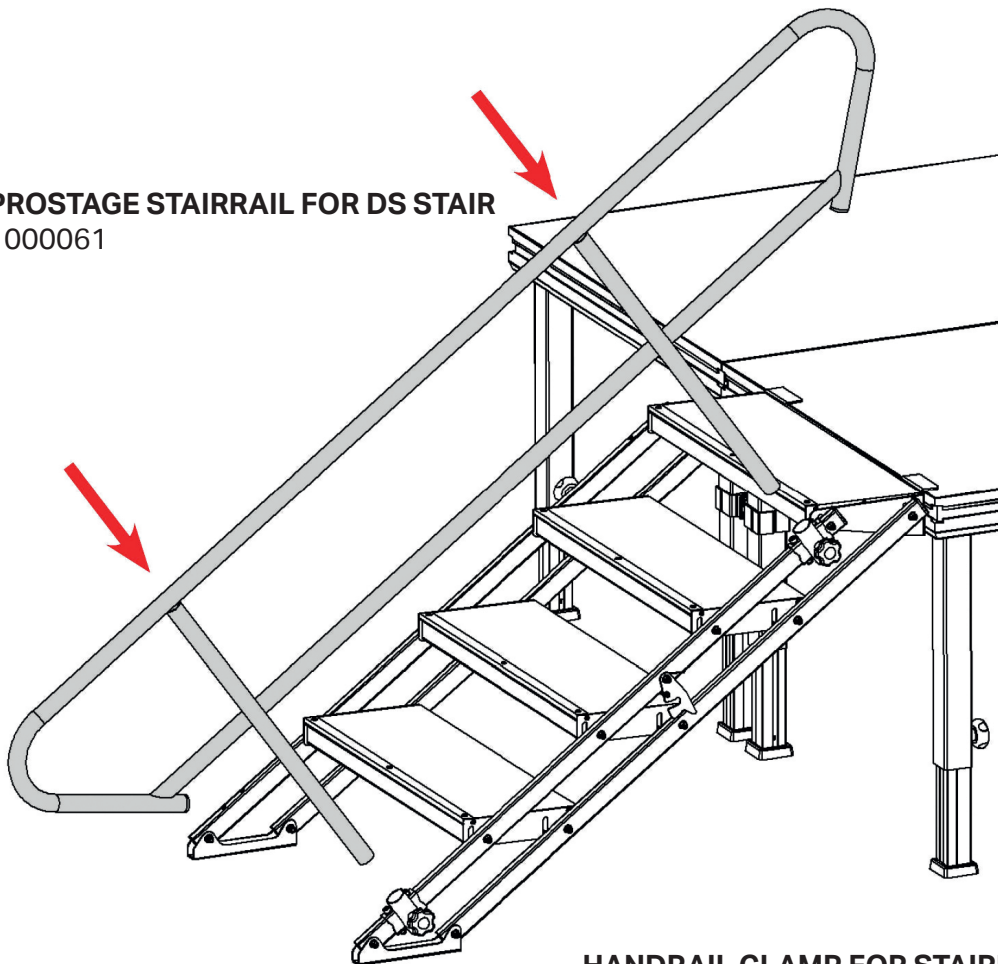

HANDRAIL CLAMP FOR STAIRRAIL DS STAIR
1711000062

DuraTruss B.V.
Junostraat 2
6468 EW Kerkrade
The Netherlands

info@duratruss.eu
+31 45 546 85 81